





Body Adaptor Kit Assembly Instructions

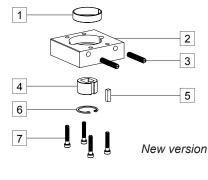

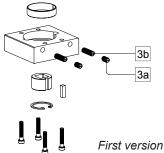



BODY ADAPTOR KIT DIS-ASSEMBLY

- Remove retainer circlip (6) to allow removal of insert sleeve (4) and insert key (5).
- First version: Unscrew 2 x lock screws (3a) from body adaptor and partially unscrew 2 x adjustment screws (3b).
- New version: Unscrew 2 x Nuts and partially unscrew 2 x adjustment (3) screws.
- Remove 4 x bolts (7) from body adaptor (2).
- Gently remove body adaptor (2) ensuring stop adjustment bearing (1) is also is also removed and placed into body adaptor (2) after disassembly.

BODY ADAPTOR KIT ASSEMBLY

- Insert body adaptor bearing (1) into body adaptor (2) and apply a small amount of grease.
- Place body adaptor (2) over driveshaft ensuring stop screw holes is facing the front of the actuator (same position as air inlet ports).
- Insert 4 x body adaptor bolts (7) into body adaptor (2) and fasten.
- First version: Insert 2 x stop screws (3b) and adjust to required position, then secure with 2 x lock screws (3a).
- New version: Insert 2 x adjustment screws (3) with washers and nuts and adjust to required position.
- Place insert sleeve (4) and key (5) ensuring it is in the correct orientation (in-line or cross mount).
- Replace retainer circlip (6) to ensure insert sleeve (4) and key (5).

Stop Screw Turns Required from Screw being Flush with BAK

Fax:

	8 F05	8 F07	12 F05	12 F07	20 F07	35 F07	35 F10	55 F10	55 F12	70 F10	70 F12	100/150 F14
0° Closed	12.5	11.00	10.00	10.00	11.60	10.00	10.00	13.30	13.30	13.30	13.30	16.00
90° Open	12.5	11.00	10.00	10.00	11.60	10.00	10.00	13.30	13.30	13.30	13.30	16.00
0-2.5° Adj.	1.13	1.20	1.20	1.20	0.96	1.06	1.06	1.25	1.25	1.25	1.25	1.22

+46 (0)8 38 78 20

Phone: +46 (0)8 38 00 75